





Name of unit: Producing a support plate

Field of education: Mechanical engineering

Professional qualification: CNC operator

Exercise: Technical drawing of a support plate (solution)

Variant: Support plate 5








Solution of exercise:

- 1. Open Autodesk Fusion 360 software.
- 2. To enter the sketch mode for drawing click on the following icon:



3. Upon showing of coordinate system origin mark, select the plane in which you want to draw - front view, top view, side view (depending on the shape of the object for drawing).

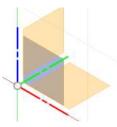


4. Tools for drawing of lines or circles are shown upon choosing of the drawing plane.




5. At the beginning of drawing the first line or circle it is recomended to use the origin of the coordinate system.



6. With the *Rectangle* option it is possible to draw a rectangle. Setting of dimensions is possible using the keyboard and for change of dimension inserting box to another dimension it is possible to use *Tab* key. Drawing of the rectangle (and finishing of drawing command) is done by pressing the *Enter* key on keyboard.

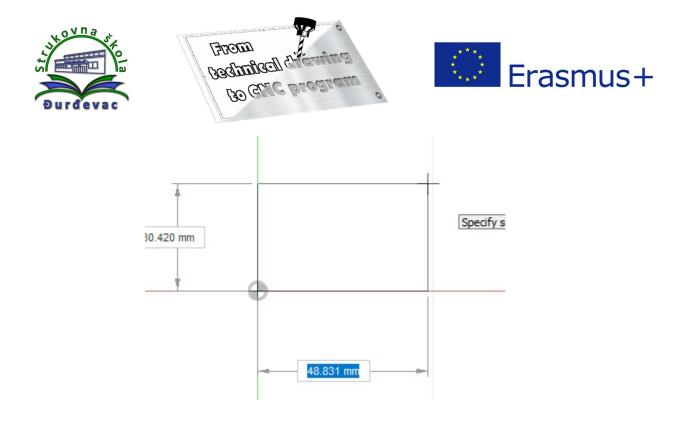


7. By using the *Sketch Dimension* command it is possible do define the length of line or a diameter of the circle and where we want to draw it, as well as make and show the exact dimensions from the coordinate system origin. If there are bisectors in the drawing, we can draw them as auxiliary lines for easier positioning of other lines or circles and delete them later.

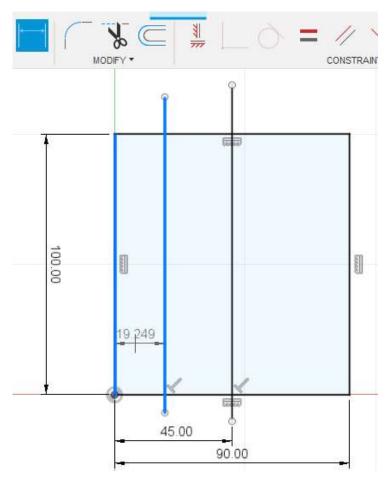






8. With the *Circle* command we can draw the circle and enter it's diameter.

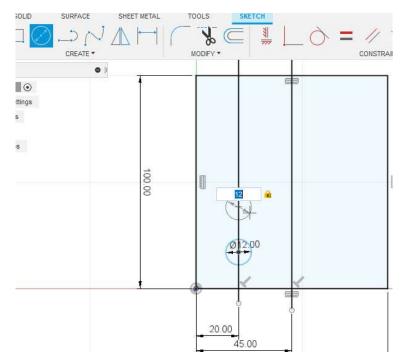


9. With the *Line* command it is possible to draw the contour of the model. We can draw all object lines at once. Using just a left mouse click, the command remains active, and we can draw the next desired line. With the *ESC* key we turn off the line command.

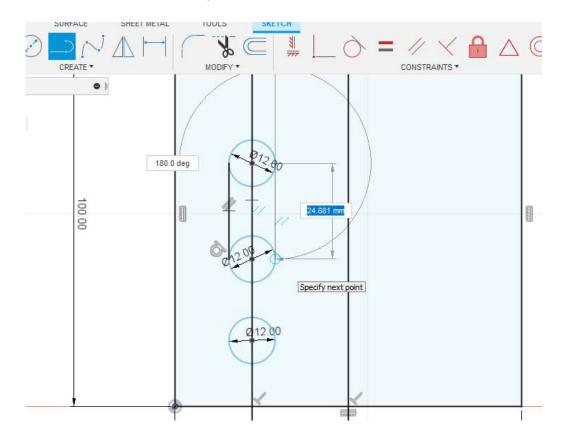





10. If you are bothered with the dimensions on the sketch, in the *Sketch Palette* you can customize user interface by hiding it (remove the check mark beside *Show Dimensions* option).

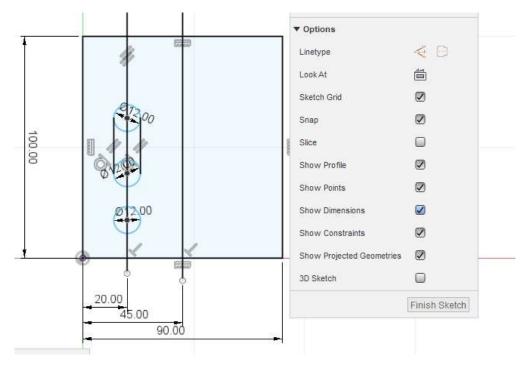

11. By using the *Trim* command it is possible to cut out part of lines or circles that we do not need anymore.











12. If we have exactly the same objects, we can copy them by using the *Move/Copy* option from the *Modify* menu. After selecting all the objects we want to copy, we choose the copy method. Types can be random, translational along axes, rotational, point to point.

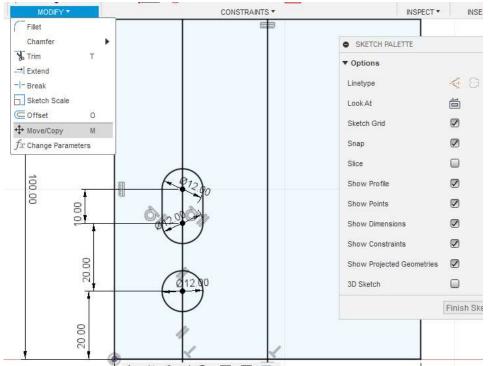




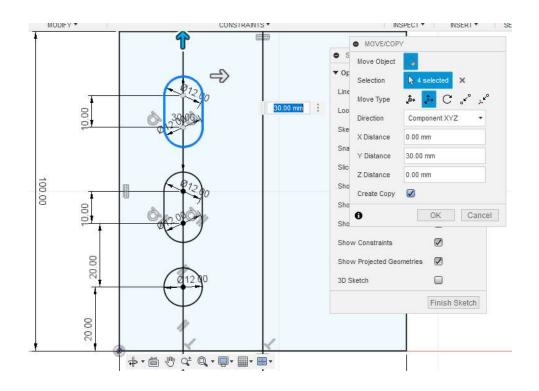




13. The *Fillet* command gives us the possibility to draw the radius between two lines.

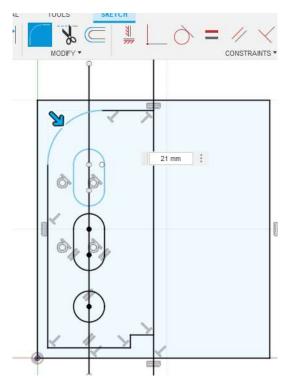


14. By using the *Offset* command it is possible to copy curves, which can speed up work during the drawing process.

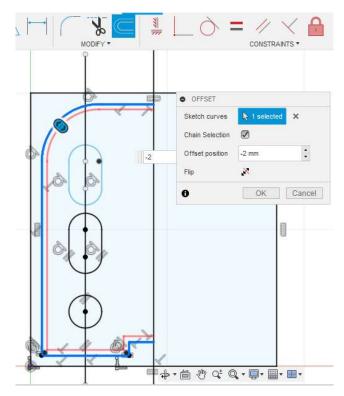




15. The *Mirror* command gives the option of mirroring of lines. After choosing of mirroring object and defining the axis line, click on the *OK* button executes the command.

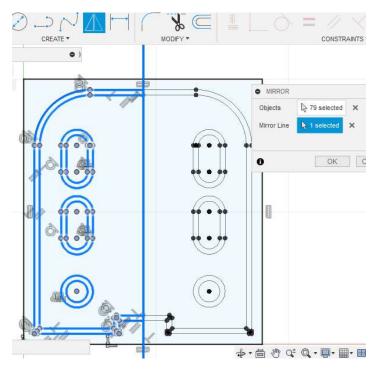

16. We can use the selection area to select more objects faster, which we activate by holding down the left mouse button and swiping over objects.

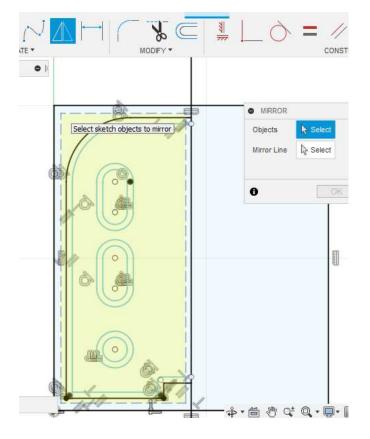








17. If all needed parts of a model are drawn, to create the 3D model it is necessary to exit from the sketch mode (*Finish Sketch* command). To apply *Extrude* or *Revolve* commands all the surfaces have to be closed (all lines connected).



18. On the orientation cube the view on the drawing model could be set. By clicking on the house symbol it is possible to switch to the isometric view.



19. An example of the isometric view of the drawing model:

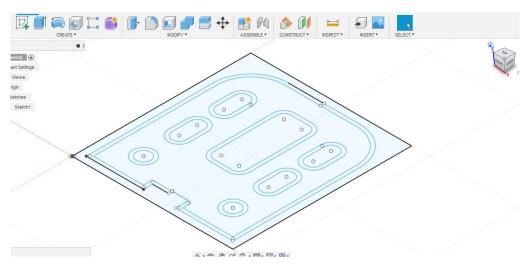









20. With the *Extrude* command we build the 3D model (pull the surface into space). It is necessary to choose closed surfaces. By entering the values or by pulling the blue arrow we define the thickness of the border.

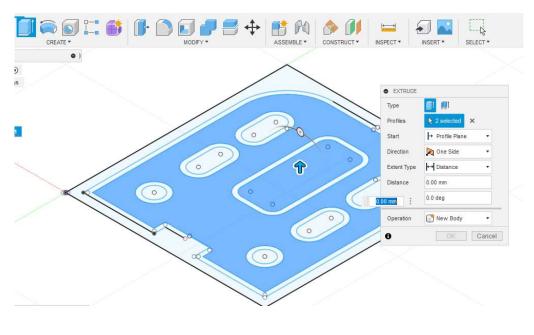


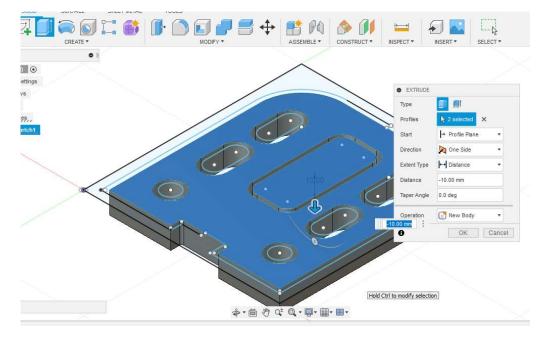






21. By using the *Point* command we define starting and ending point for simulation and generation of NC code.

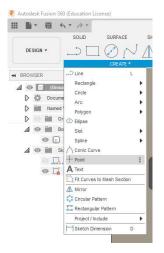

22. After creating of the 3D model the body of the drawn part is visible, but the sketch is not. To show the sketch again we need to click on the eye icon and everything that is drawn in this sketch will be visible in drawing space. If there is need for change of some part of the sketch by double clicking on the sketch it is possible to enter the sketch editing mode.

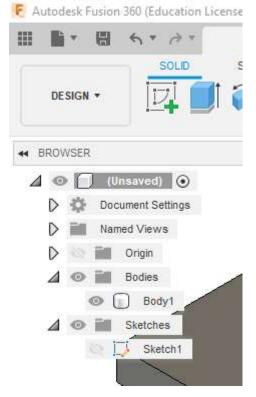





23. From the **Design** menu, by choosing the **Manufacture** option, it is possible to switch to the mode for making of the simulation and generating the NC code.






24. Upon entering the manufacture mode there are new options available.

	· ↓ ↔ ×			🗊 Untitled*				× + 획	301	0
MANUFACTURE *						ag 🦂	61 E	🎼 📑 📑	<u> </u>	
	SETUP *	2D ¥	3D *	DRILLING *	MULTI-AXIS *	MODIFY *	ACTIONS *	MANAGE *	INSPECT *	SELECT

25. By clicking on the *Setup* command new dialog window opens, in which we can set up the initial material and define the coordinate system.

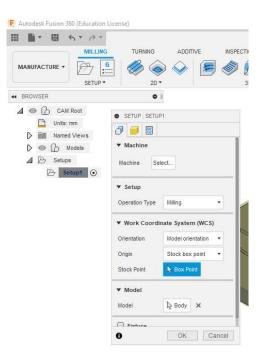









TURNNG ADDITIVE NSPECTION PABRICATION U SETUP: SETUP! Setup: Setup! Setup: Setup! Setup: Setup! Setup: Setup! Machine Setup: Setup: Setup! Setup: Setup! Mode Relative size Vachine Setup: Setup: Setup! Stock Offset Mode Add stock to Vachine Setup: Stock Side Offset Omm Stock Side Offset Omm Verk Coordinate System (WCS) Stock Side Offset Omm Stock Side Offset Omm Orientation Seted X & Y axes X Round Up to Nearest Omm Stock Bottom Offset Omm Yaxis Nodel Nodelorigin Width (X) 200 mm Peth(Y) 100 mm Model Round V to Nearest Omm Height (Z) 10 mm	
 Stock <	
Setup: Mode Relative size * Machine Setect Machine Setect Machine Setect Nachine Setect Setup: Operation Type Operation Type Milling * Work Coordinate System (WCS) Orientation Setect X & Y axes * XAxis SX Fip XAxis Image: Comparison of the two size YAxis Image: Comparison of two size <	
Machine Stock Offset Mode Add stock to Machine Select Setup Stock Side Offset Operation Type Milling Wink Stock Top Offset Orgin Stock Soltom Offset Model lorigin Model Vertor Nodel Model Body Stock Offset Mode Stock Side Offset Onm Stock Bottom Offset Onm Onm Onm Onm Onm Onm Model	
▼ setup Operation Type Milling ▼ ▼ Work Coordinate System (WCS) Origin Stock Top Offset 0 mm Origin Select X & Y axes X Flip XAxis ▼ × Flip Y Axis □ ○ Origin Model origin ▼ Width (X) 200 mm Model № Body × Height (Z) 10 mm	
Operation Type Milling • Work Coordinate System (WCS) Orientation Select X & Y axes X Axis • X × Fip X Axis • Y × Fip Y Axis • Model Model • Body Xodel Body Stock Top Offset 0 mm • Stock Bottom Offset 0 mm • Dimensions • Width (X) 200 mm • Model Model • Body • Model	Z
• Work Coordinate System (WCS) Orientation Select X & Y axes XAxis • X × Fip XAxis • X Fip XAxis • X • Model • Model • Body × Height (Z) 10 mm	
Orientation Select X & Y axes X Axis X × Flip XAxis V Y Axis V Y Axis V I V × Image: Constraint of the select of the	
Flip X Axis □ Y Axis lp Y × Flip Y Axis □ Origin Model origin • Model lp Body × Height (Z) 10 mm	d
Flip Y Axis Image: Comparison of the state	
Origin Model origin Vidth (X) 200 mm V Model Vidth (X) 100 mm Model Vidth (X) 100 mm	
Model Re Body × Height (Z) 10 mm	
Height (Z) 10 mm	
U Fixture	
• ОК Салсе! • ОК Салсе!	Stock Solid

26. A milling operations menu:

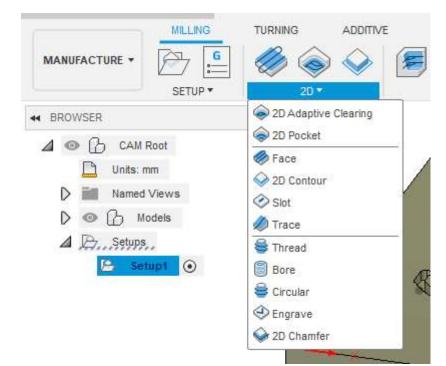





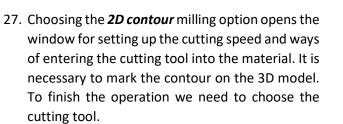



2D - 2D CONTOUR : 2D C	CONTOUR1	3D •
000	<u>52</u>	
▼ Tool		
Tool	Select	
Coolant	Flood	
Coolant	1000	· .
Feed & Speed		
Preset	Preset	
Spindle Speed	5000 rpm	:
Surface Speed	157.08 m/min	:
Ramp Spindle Speed	5000 rpm	:
Cutting Feedrate	1000 mm/min	:
Feed per Tooth	0.0666667 mm	:
Lead-In Feedrate	1000 mm/min	
Lead-Out Feedrate	1000 mm/min	•
Ramp Feedrate	333.333 mm/mii	•
Plunge Feedrate	333.333 mm/mir	
	333.333 1111011	*






28. In the *Select Tool* window there is option to choose one of the tool from the list. By using filters it is possible to choose the tool and the tool holder. The tools can be adjusted if needed (e.g. different diameters of cutting tool).

	Search					Filters Info
7000	+ /	° là là là là	⊒ 1≓6 2≓7 □		V.	 Tool category
3 15 <i>d</i> 🗍	¢	Name	Corner radius	Diameter 🔨	Flute length	 Milling Hole making Turning
~ Documents	•	Holders - Standard T	aper Blanks			O Cutting
✓ Untitled	12	BT30 - Blank1				 Probe Holders
Setup1	12	HSK40 - Blank				
~ Local	12	CT50 - Blank2				
Library	52	CT50 - Blank1				
 Fusion 360 Library 	52	CT40 - Blank2				
Holders - Standa	- 19	HSK63 - Blank				
Sample Holders (
Sample Holders	Cuttin	n data				
Sample Probes (]		,				
Sample Probes						
Sample Profile To			Select a tool			
Sample Profile To						


29. By clicking on the right mouse button over the option and selecting *Edit Tool* command we can change cutting tool and tool holder dimensions.

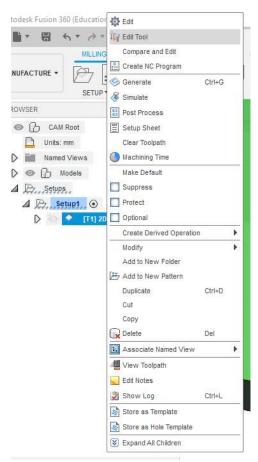





30. After setting all of the necessary options the simulation can be started by choosing the *Simulate* command from the *Actions* menu.

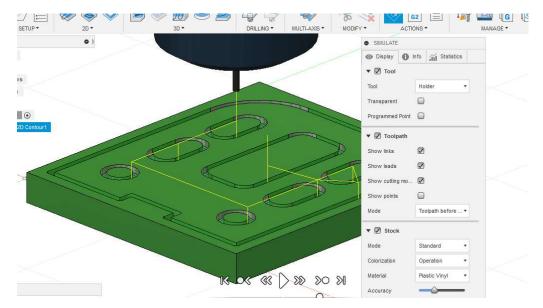

31. After reviewing the simulation, if no errors are shown, we can proceed to the generation of NC code through the *Post Process* option from the *Actions* menu. A window opens where we can choose the type of machine and the type of program on the computer.

Configuration Folder				
C: \Users \Profesor \AppData \Local \Autodesk	\Autodesk Fusion 360\CAM\	cache\posts	Setu	p
Post Configuration				
Enter search text		All vendors		2
Mach2Mill / mach2mill	~	Open config		
Output folder		2	NC extensi	on
C:\Users\Profesor\AppData\Local\Fusion 36	Open folder	.tap		
Program Settings				
-	Property Dwell in seconds		Value Yes	^
Program name or number 1001	Dwell in seconds Optional stop		1.11.750505	^
Program name or number 1001	Dwell in seconds Optional stop Preload tool		Yes Yes No	^
Program name or number 1001 Program comment 123	Dwell in seconds Optional stop Preload tool Safe Retracts		Yes Yes No G28	Â
Program name or number 1001 Program comment 123 Jnit	Dwell in seconds Optional stop Preload tool Safe Retracts Separate words v	with space.	Yes Yes No G28 Yes	Â
Program name or number 1001 Program comment 123	Dwell in seconds Optional stop Preload tool Safe Retracts Separate words v Radius arcs	with space	Yes Yes No G28 Yes No	
Program name or number 1001 Program comment 123 Unit Document unit	Dwell in seconds Optional stop Preload tool Safe Retracts Separate words v Radius arcs Use rigid tapping		Yes Yes No G28 Yes No Yes	
Program name or number 1001 Program comment 123 Unit Document unit Reorder to minimize tool changes	Dwell in seconds Optional stop Preload tool Safe Retracts Separate words v Radius arcs Use rigid tapping Use subroutine c	/des	Yes Yes No G28 Yes No Yes No	
Program name or number 1001 Program comment 123 Unit Document unit	Dwell in seconds Optional stop Preload tool Safe Retracts Separate words v Radius arcs Use rigid tapping	/des	Yes Yes No G28 Yes No Yes	^

32. After all the settings, clicking on **Post** button opens a new window with the generated NC code, which we have to clean before we transfer it to the machine controller.